 


FP48988 MUK Rev 2

morphy richards®

Accents Table Blender

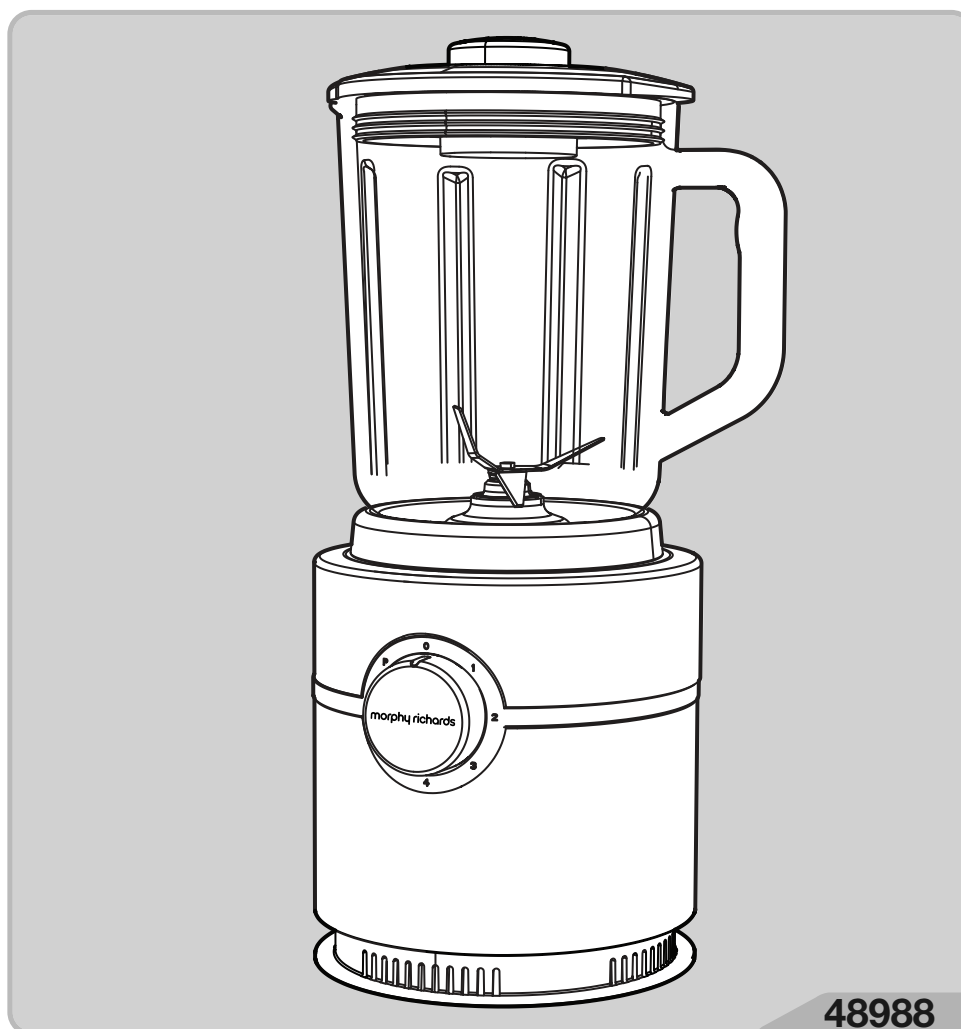

For competitions, product hints and tips
and more join us at



www.homeofthehouseproud.com



www.facebook.com/morphyrichardsuk

 


www.twitter.com/loveyourmorphy

www.morphyrichards.com

* Register online for your 5 year guarantee. See back of this instruction book for details. (UK and Ireland customers only)


Product overview

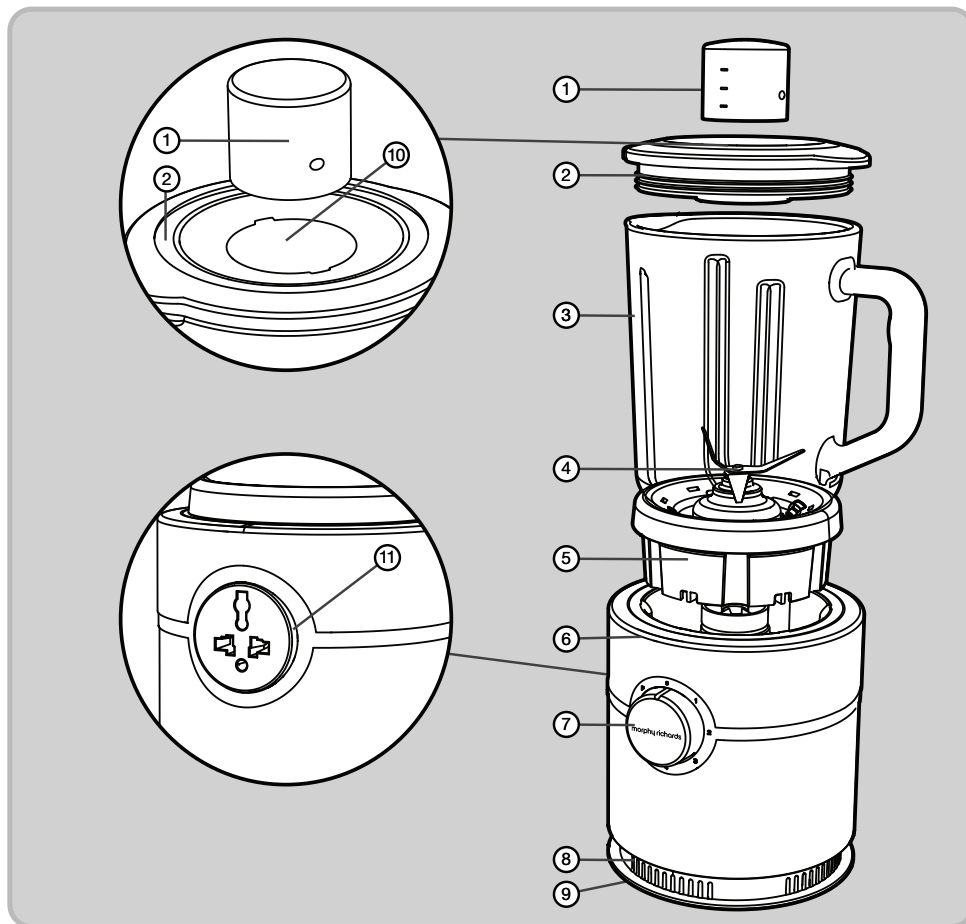



Features

- | | |
|--------------------------------|-----------------------------|
| (1) Measuring Cup | (10) Pouring Hole |
| (2) Lid | (11) Plug Storage (on rear) |
| (3) Glass Jug | |
| (4) Blending Blade | |
| (5) Connector | |
| (6) Base Unit | |
| (7) Control Dial | |
| (8) Air Vents | |
| (9) Cable Storage (underneath) | |

 
Using your Accents Table Blender

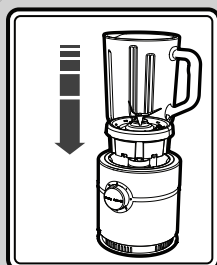

 
 
Place the Glass Jug (3) onto the Base Unit (6). For ease of use, there are 6 positions for the Jug to sit on the Base Unit.

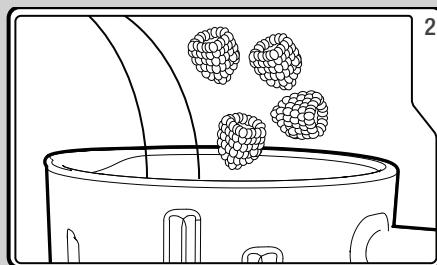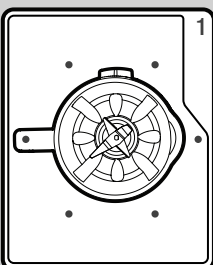

 
Place the food or cold liquids into the Glass Jug. Do not exceed more than 1L.

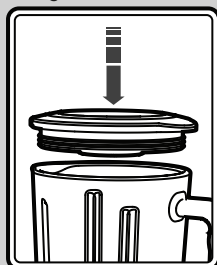

  
Place the Lid (2) on the Glass Jug, pushing down firmly. Place the Measuring Cap (1) into place twisting clockwise to lock into place.

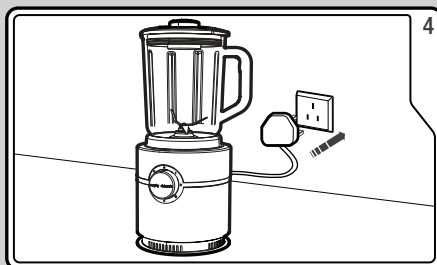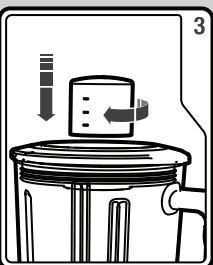

 Plug the Accents Table Blender into the mains.

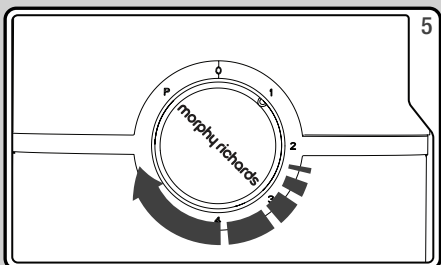

 Turn the Control Dial (7) to 1 to start blending. Increase the speed as required.

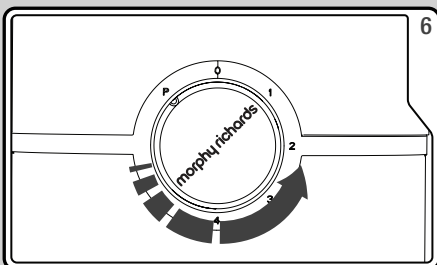

To use the pulse function turn the Control Dial to P. Do not use for prolonged periods of time.

Before first use

- Carefully unpack your Accents Table Blender as the Blending Blades (4) are very sharp.
- Remove any stickers (except for the serial label) and wash all the parts that are safe to immerse in water.

- WARNING:** Never immerse the Base Unit in water or in any other liquid. Always ensure the electrical connections are kept dry. This may be wiped with a clean, damp cloth. But only when unplugged from the electrical socket.

IMPORTANT

**DO NOT ADD HOT LIQUID TO THE JUG.
ALLOW TO COOL FIRST.**

Measuring Cap

- The Measuring Cap (1) can be used to measure small quantities of liquid.
- 1 Pour the liquid through the Pouring Hole (10) in the Lid.
 - 2 Place the Measuring Cap (3) back in the Lid, twisting to lock/unlock. Then proceed with your blending.

Crushing ice

- Follow the procedure in the 'Using your Accents Table Blender' section, replacing food with the ice cubes to be crushed.
- Plug in the Blender and turn the Control Dial (7) to pulse position (P) and hold for several seconds
- Note: The maximum capacity for ice crushing at any one time is 500ml.

Top tips

Use your Blender for soups, sauces, drinks, pates, mayonnaise, dressing etc.

- Do not put dry ingredients into the Blender before switching on. If necessary cut them into pieces, remove the Measuring Cap, then with the Blender running drop the pieces through the Pouring Hole one by one.

Never run the Blender with dry ingredients for longer than 15 seconds.

Allow to cool for 5 minutes.

- When making mayonnaise, put all the ingredients except oil, into the blender. Then with the machine running pour the oil slowly into the Blender through the Pouring Hole (10).
- Thick mixture, eg. pates and dips, may require scraping out with a spatula. Ensure the appliance is switched off first. If the mixture is difficult to process add more liquid.
- When blending, pour the liquids in first and then add the solid food. Begin blending at the lower speed and increase when needed.

IMPORTANT: To ensure the long life of your blender, never run it for longer than 60 seconds and allow to cool for 5 minutes. Switch off as soon as you have reached the desired consistency.

- The machine will not work if the Glass Jug (3) is fitted incorrectly.

- Don't use the Glass Jug as a storage container. Keep it empty when not in use.
- Never blend more than 1 litre (1½ pints) - less for frothy liquids, such as milk shakes.

Care and cleaning

- Before cleaning and maintenance, switch the appliance off and unplug it.
- After use, fill the Glass Jug (3) with 1L (1½ pints) of warm water and run for 30 seconds on the pulse setting and repeat as necessary. Never use abrasives or cream cleaners.
- Clean the Base Unit (6) with a damp cloth or kitchen paper roll.
- There is a facility to wrap your power cable around the base of the product and fit the plug into the Plug Holder (11).
- Reassemble the Accents Blender by carefully placing the Glass Jug on the Base Unit, ensuring it fits correctly.
- **WARNING :** Never immerse the Base Unit in water.
- **WARNING:** If any liquid is spilt in the top of the Base Unit, switch off and unplug from the socket and dry with a cloth.

Contact us

Helpline

If you are having a problem with your appliance, please call our Helpline, as we are more likely to be able to help than the store you purchased the item from.

Please have the product name, model number and serial number to hand when you call to help us deal with your enquiry quicker.

UK Helpline: 0844 871 0960

IRE Helpline: 1800 409 119

Spares: 0844 873 0726

Talk To Us

If you have any questions or comments, or want some great tips or recipe ideas to help you get the most out of your products, join us online:

Blog: www.homeofthehouseproud.com

Facebook: www.facebook.com/morphyrichardsuk

Twitter: www.twitter.com/loveyourmorphy

Website: www.morphyrichards.com

Notes

[illegible]

Health and Safety

The use of any electrical appliance requires the following common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

WARNING: Danger to the person!

IMPORTANT: Damage to the appliance!

In addition, we offer the following safety advice.

Location

- This appliance is intended to be used in household and similar applications such as:
farm houses;
by clients in hotels, motels and other residential type environments;
bed and breakfast type environments.
It is not suitable for use in staff kitchen areas in shops, offices and other working environments.
- Do not use outdoors or in a bathroom.
- Always locate your appliance away from the edge of the worktop.
- Do not place the bowl used with the appliance on a highly polished wooden surface as damage may occur to the surface.
- Do not place the appliance on or near a hot surface, such as a hot plate or radiant rings or near a naked flame.

Mains cable

- Do not let the mains cable hang over the edge of the worktop where a child could reach it.
- Do not let the lead run across an open space e.g. between a low socket and a table.
- Do not let the cable run across a cooker or other hot area which might damage the cable.
- The mains cable should reach from the socket to the base unit without straining the connections.
- The power cord cannot be replaced. Contact Morphy Richards for advice.

Personal safety

- Avoid touching moving parts. Keep hands, hair and clothing, and utensils away from the hand mixer attachment blades during operation, to prevent personal injury and/or damage to the appliance.
- **WARNING:** To protect against the risk of electric shock, NEVER immerse the appliance body in water or in any other liquid and always ensure the electrical connections are kept dry.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

Children

- Children do not understand the dangers associated with operating electrical appliances. Never allow children to use this appliance.

- Children should be supervised to ensure that they do not play with the appliance.
- Teach children to be aware of dangers in the kitchen, warn them of the dangers of reaching up to areas where they cannot see properly or should not be reaching.

Other safety considerations

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of attachments or tools not recommended or sold by Morphy Richards may cause fire, electric shock or injury.
- Do not use the appliance for anything other than it's intended purpose.
- Unplug from the outlet when not in use, or when left unattended, and before assembling, disassembling or cleaning.

Product specific safety

- **IMPORTANT:** Allow hot liquids to cool before adding to the blender, always ensure the lid is fitted correctly.
- **WARNING:** To protect against fire, electric shock and personal injury, do not immerse the cord, plug or blender base in water or other liquid.
- **WARNING:** The blades are very sharp. Handle with care when using and cleaning.
- Make sure the blender is switched off before connecting to or disconnecting from the mains supply and when left unattended.
- When using the blender, ensure the lid is in place before switching on. Do not remove the lid until the blade has stopped rotating.
- Do not blend for longer than the time periods recommended in the operating chart.
- Do not overfill the blender. This could cause damage to the motor. The 5 amp fuse will blow if the blender is overloaded. Replace the fuse and do not exceed the maximum recommended volumes. Refer to the 'Operating chart' on page 5.

Electrical requirements

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

WARNING : The plug removed from the mains lead, if severed, must be destroyed, as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.

Should the fuse in the 13 amp plug require changing, a 5 amp BS1362 fuse must be fitted.

WARNING: This appliance must be earthed.

FP48988 MUK Rev 2 09/11

Registering your 5 year guarantee

Your standard one year guarantee is extended for an additional 36 months when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 year. To validate your 5 year guarantee register with us online at www.morphyrichards.co.uk

Or call our customer registration line

UK 0844 871 0962

IRE 1800 409 119

N.B. Each qualifying product needs to be registered with Morphy Richards individually.

Please note that the 5 year guarantee is only available in the UK and Ireland. Please refer to the 2 year guarantee for more information.

Your 2 year guarantee

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown.

You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
 - 2 The appliance has been used on a voltage supply other than that stamped on the products.
 - 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
 - 4 The appliance has been used for hire purposes or non domestic use.
 - 5 The appliance is second hand.
 - 6 Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion
 - 7 Plastic filters for all Morphy Richards kettles and coffee makers are not covered by the guarantee.
 - 8 Batteries and damage from leakage are not covered by the guarantee.
- This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.



For electrical products sold within the European Community. At the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country

**IF YOU ARE HAVING A PROBLEM
WITH ONE OF OUR PRODUCTS, CALL
OUR HELPLINE:**

**UK: 0844 871 0960
EIRE: 1800 409 119
SPARES: 0844 873 0726**

morphy richards

The After Sales Division
Morphy Richards Ltd
Mexborough, South Yorkshire,
England, S64 8AJ

Helplines (office hours)
UK 0844 871 0960
Spare Parts 0844 873 0726
Republic of Ireland 1800 409 119
www.morphyrichards.com

